



Montageanleitung


P827 Lüftungshülse 125mm

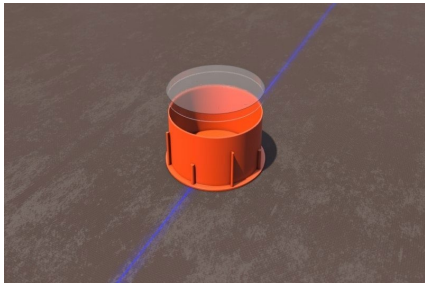

Schutzdeckel der Lüftungshülse entfernen.

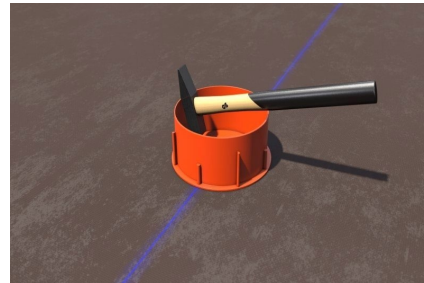


Lüftungshülse auf Schalung nageln. Die integrierte Nagelfixierung ermöglicht eine einfache Montage.

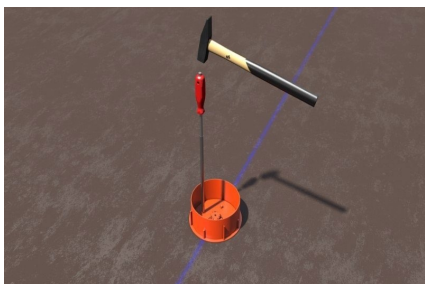


Alternativ mit dem Nagler auf der Schalung befestigen.



Lüftungsverteiler auf passende Länge kürzen.

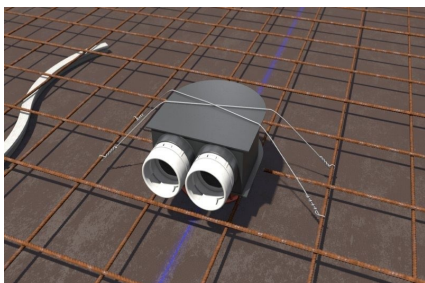

Lüftungsverteiler in Lüftungshülse einstecken. Der Lüftungsverteiler ist um 360 Grad ausrichtbar. Verteiler an Bewehrung mit Draht fixieren.

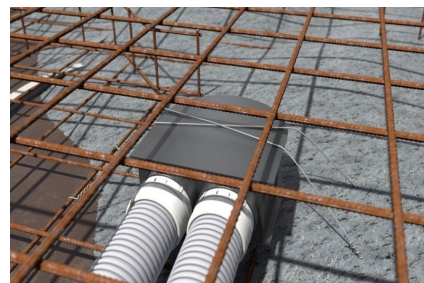

Lüftungsrohre anschließen und betonieren.



Einfaches Öffnen durch einen Hammerschlag.



Adapterring an die Lüftungshülse schrauben.

Montageanleitung

P827 Lüftungshülse 125mm




Lüftungsauslässe montieren.




Durch integrierte und genormte Schraubdomes
auch andere Auslassformen möglich.

Assembly instruction


P827 Ventilation sleeve 125 mm

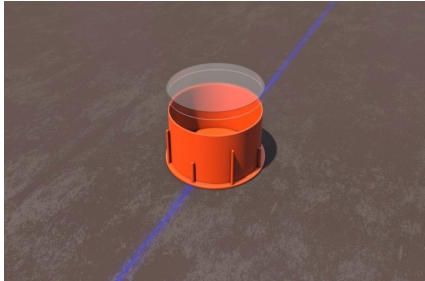

Remove the protective cover of the ventilation sleeve.

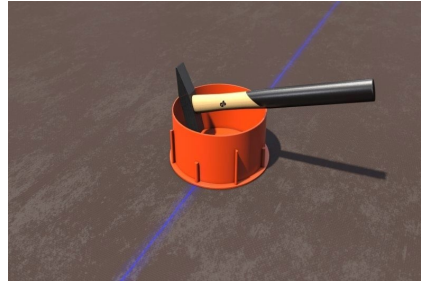


Nail ventilation sleeve to formwork. The integrated nail fixation enables easy assembly.

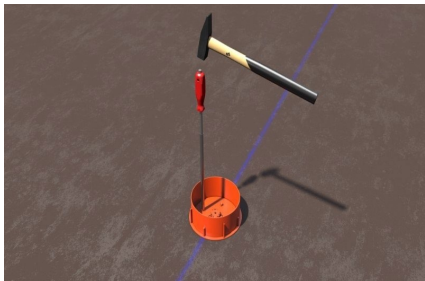


Alternatively, fasten to the formwork with the nailer.



Shorten ventilation manifold to suitable length..

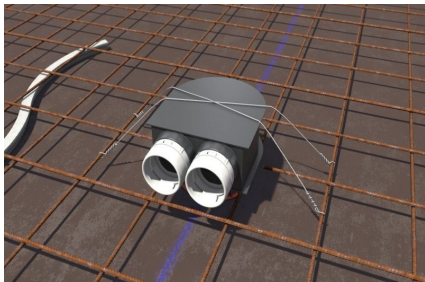

Insert the ventilation distributor into the ventilation sleeve. The ventilation distributor can be aligned by 360 degrees. Fix the distributor to the reinforcement with wire.

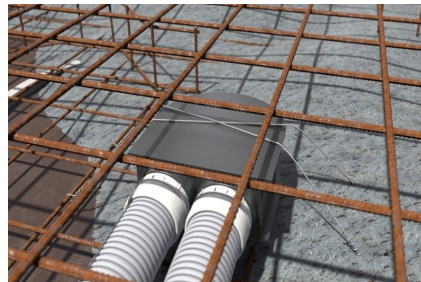

Connect ventilation pipes and pour concrete.

Assembly instruction

P817 Ventilation sleeve 125 mm



Easy to open with a tap of the hammer.



Screw the adapter ring onto the ventilation sleeve.



Press in plaster lid by hand, alternatively drill out plaster lid with drill bit.



Enough space inside for electronic components.